

TURNING ON YOUR WISCOM TYPE II RADIO

Type II WISCOM radios are controlled through a desktop computer. Through the computer, users can:

- Change who the hospital is speaking to
- Activate the radio to begin communicating
- Adjust the radio volume

The computer should be located in a central location and remain on at all times with the microphone and speakers connected.



The speaker volume should be loud enough that hospital personnel can hear incoming calls directed to their facility.



LOGGING INTO WISCOM



1 Turn on the Dell computer. Make sure that the computer, monitor, and speakers are on.

2 Click on the StarGate Console icon to open the program.

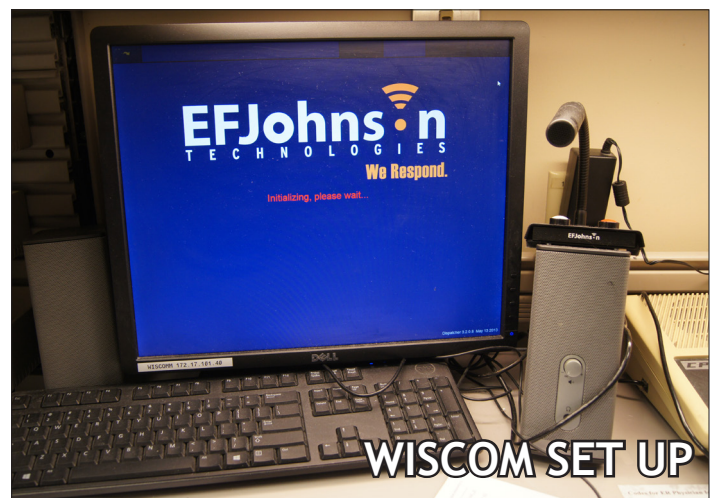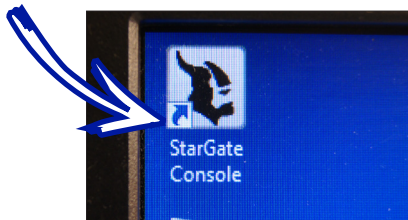

3 In the "Select your login name" field, your hospital name should be identified. If not, use the drop down to select your hospital name.

4 You will then be asked to enter a PIN number. **The PIN number is always 1.** Enter 1 in this field and then click on the "Enter" button.

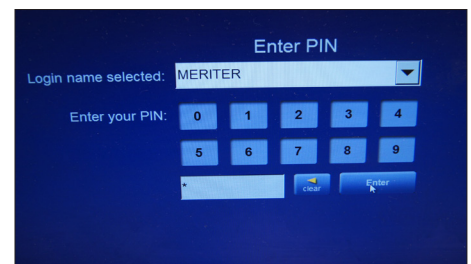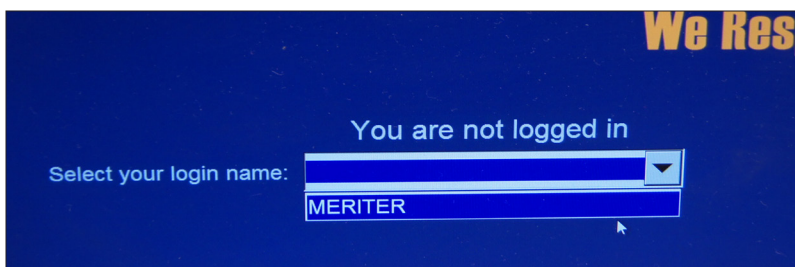

**It is recommended that you reboot the system once a week.
Do so during non-peak business hours.**